



Chair Arm Cover Dimensions

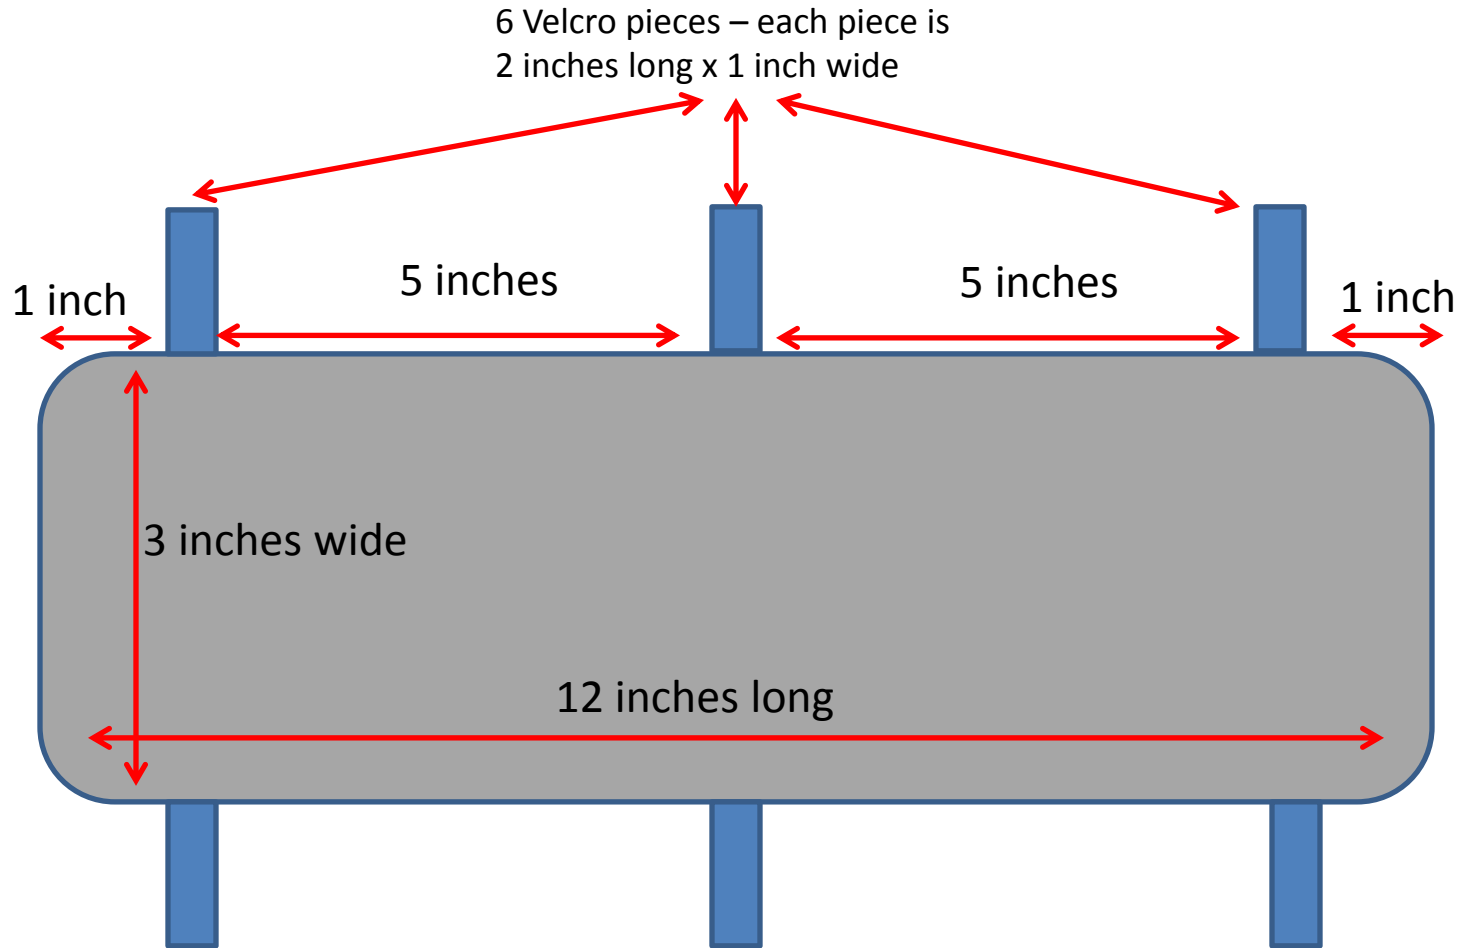


Velcro (hook & loop) alignment

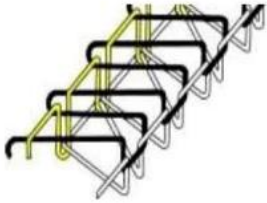

Velcro straps X 6 sewn to the underside of the neoprene.
Velcro straps are 2 inches long x 1 inch wide

Edges to be sewn with
a wide over lock stitch
to hold Velcro in place

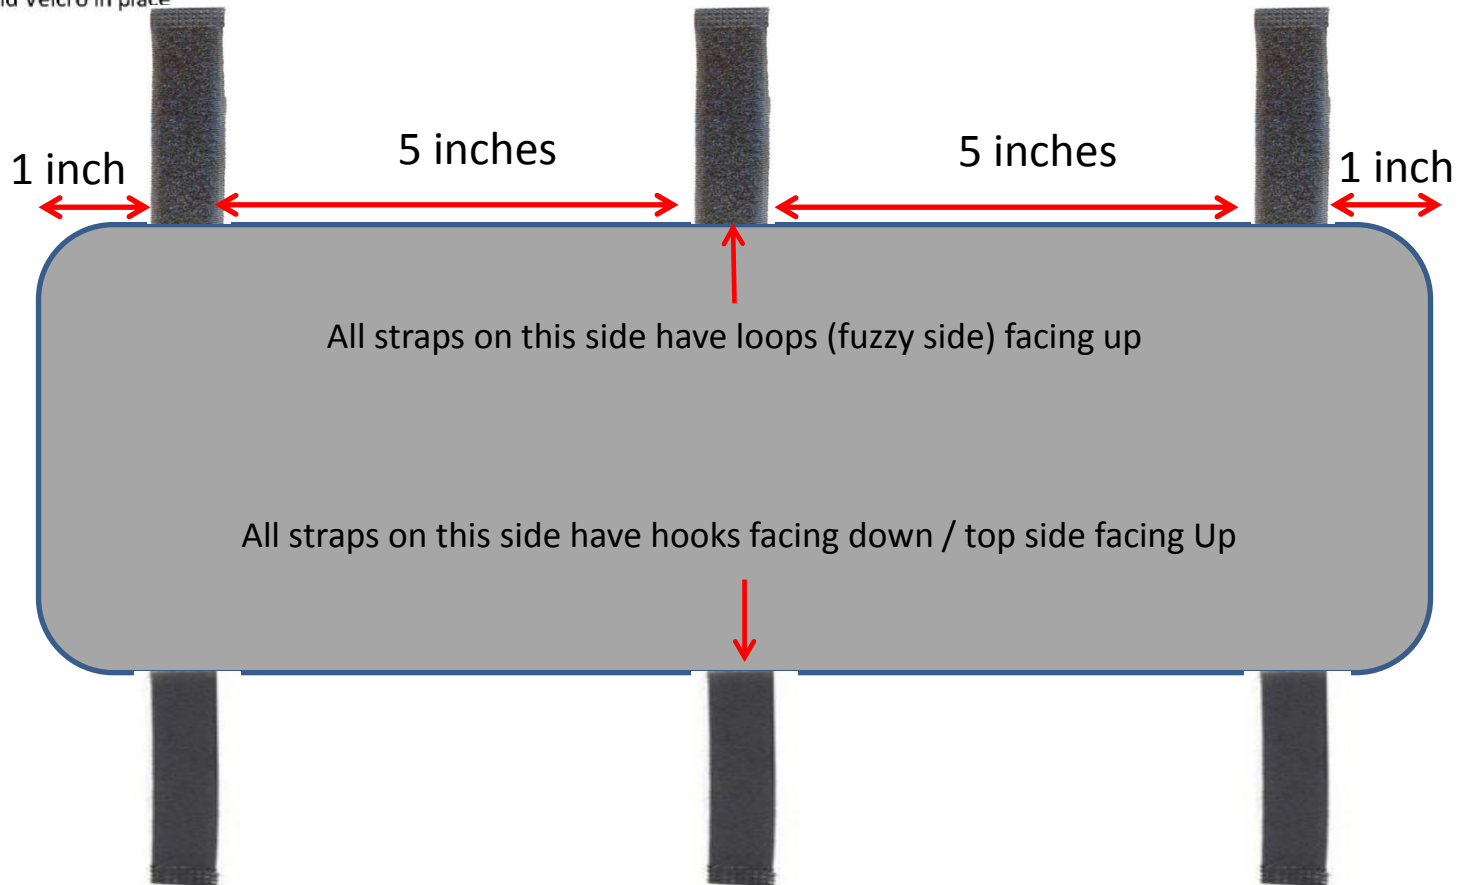


Material Example – Velcro (hook & loop)


Hook Side

Loop Side

Top Side (no hook or loop)

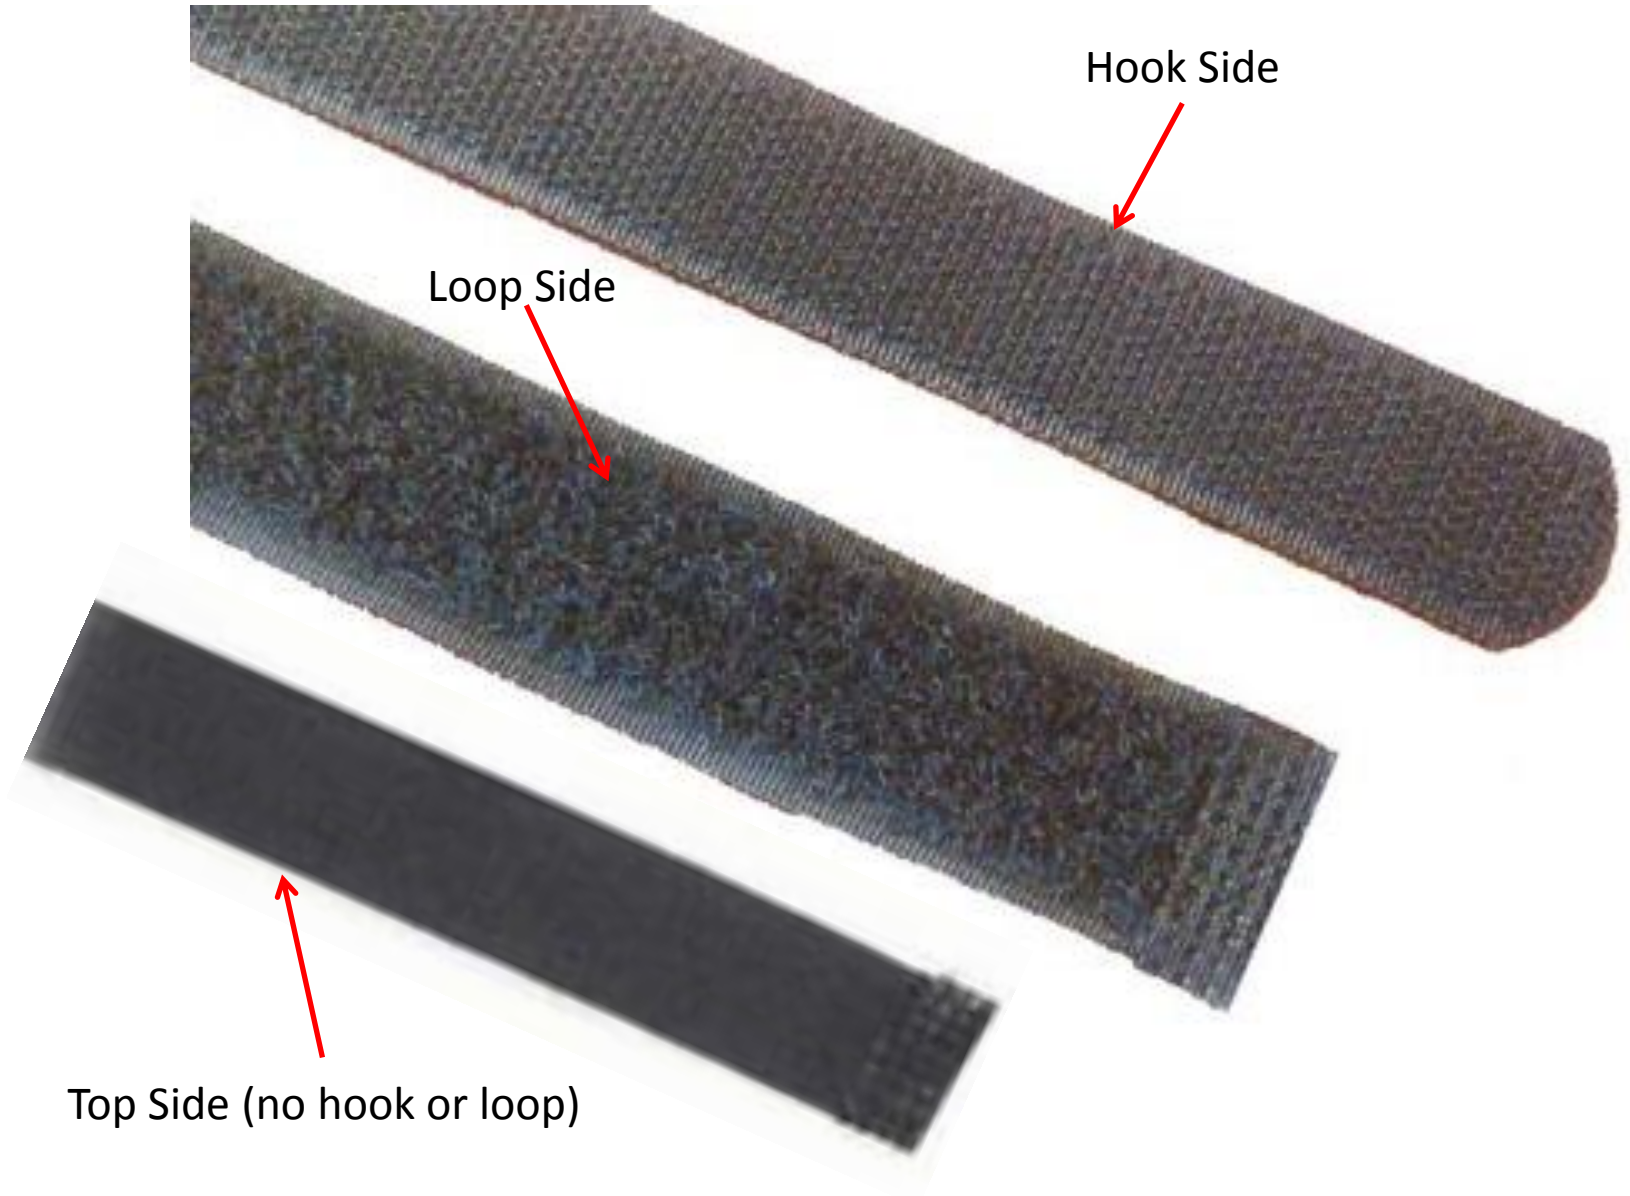

Material Example – Neoprene + Fabric top

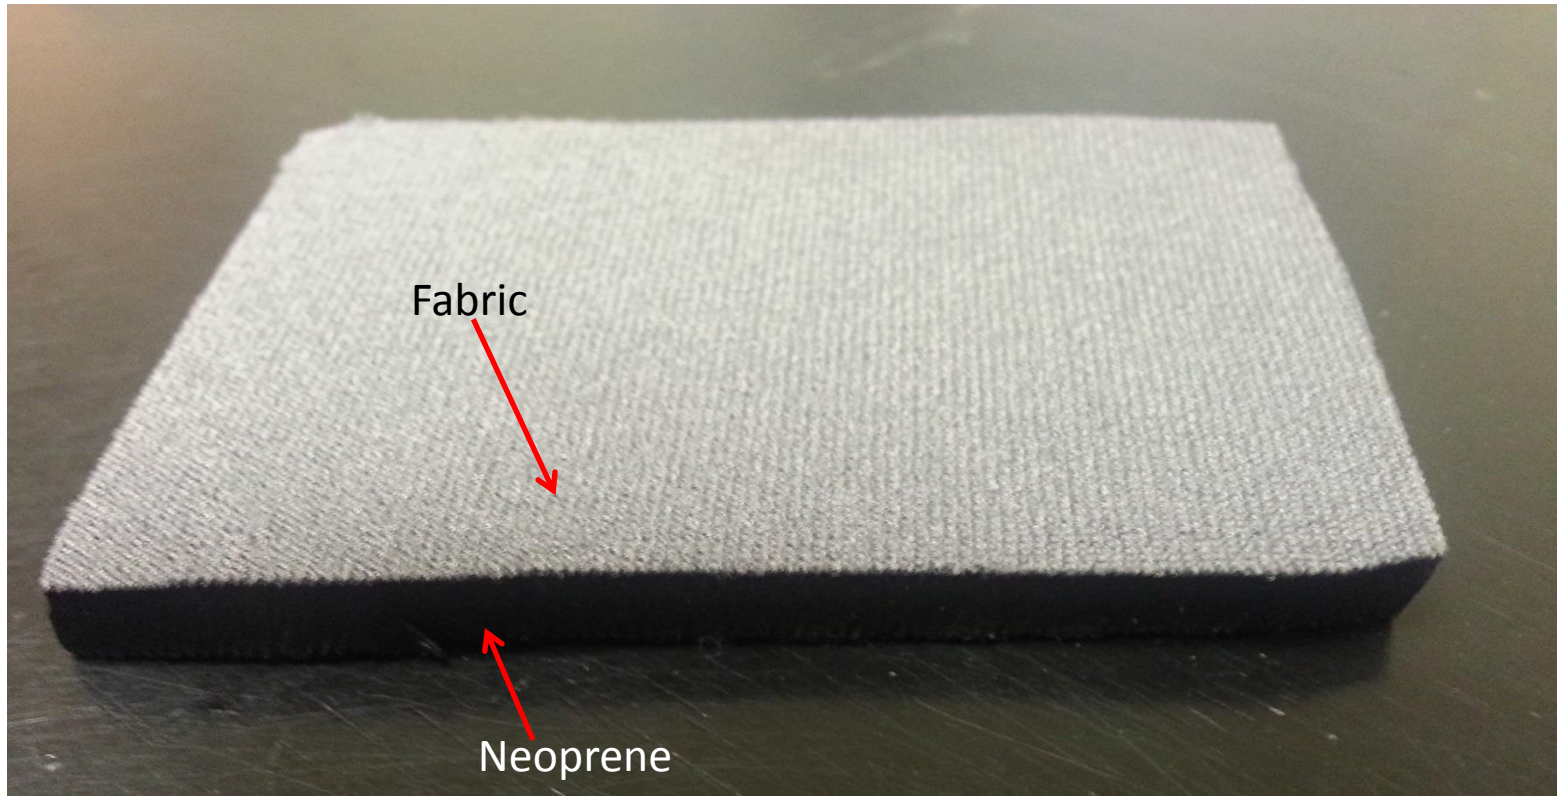

2ml neoprene with fabric top glued on, as shown in the example. Material would have a single logo.